 


EPA 503 THREE POINTS MARKING MACHINE

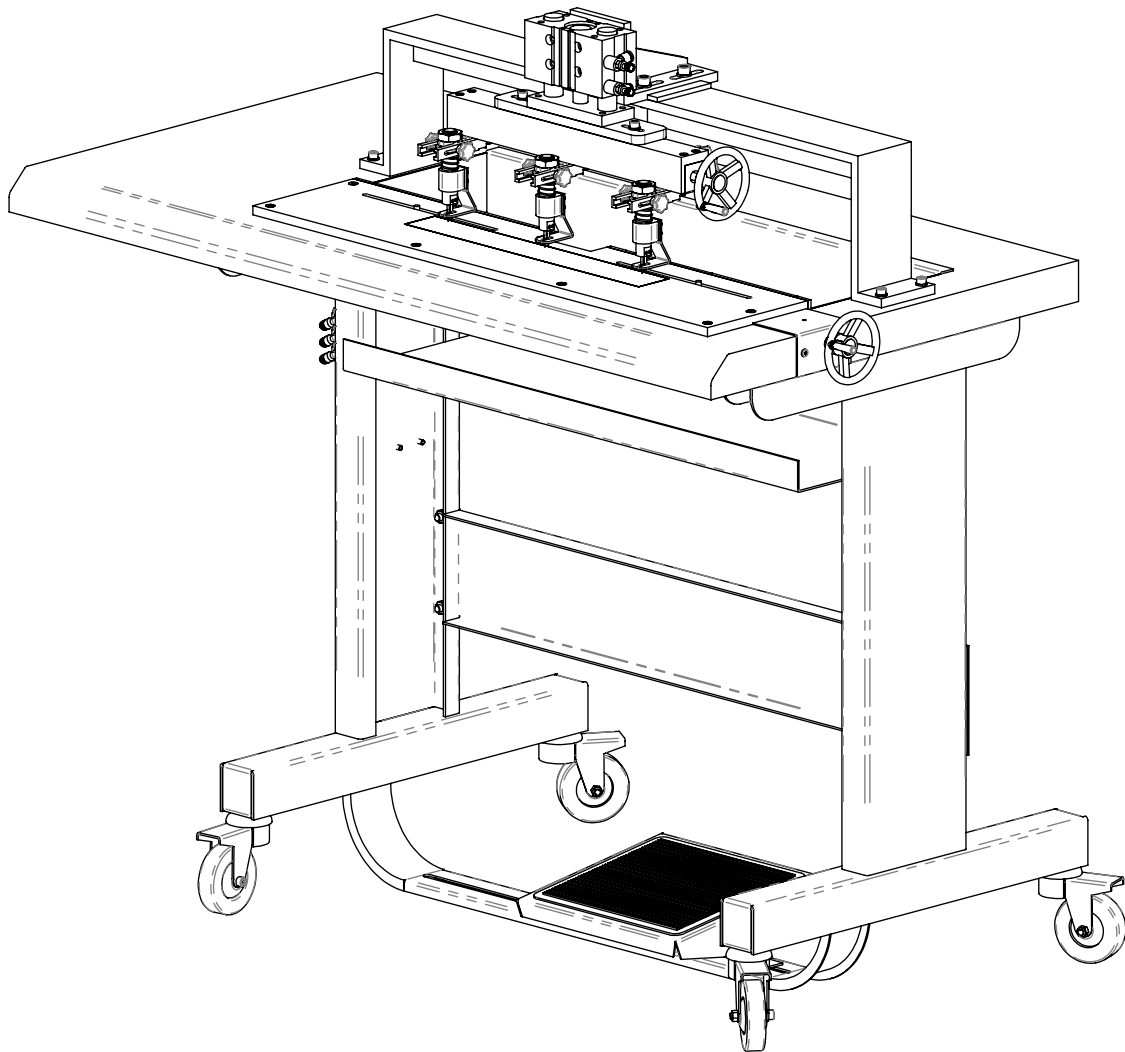

MODEL : EPA 503



ATTESTATION

of product conformity

Certificate NO : 2024-PTC-5433

PTC Technical Inspection and Certification

ATTESTATION OF COMPLIANCE

(UYGUNLUK ONAYI)



By examining the technical files and test reports, it has been determined that the specified product complies with the 2006/42/EC Machinery Safety Regulation published by the European Union Technical Commission.

Teknik dosya ve test raporları incelenerek belirtilen ürünün Avrupa Birliği Teknik Komisyonu tarafından yayımlanan 2006/42/AT Makina Emniyeti Yönetmeliğine uygunluğu saptanmıştır.

Manufacturer (Üretici) : EPA TEKNOLOJİ VE OTOMASYON MAKİNALARI SAN.TİC.LTD.ŞTİ.

TEVFİKBEY MAH.ŞEHİT EROL OLÇOK CAD. NO.16 34295 SEFAKÖY KÜÇÜKÇEKMECE-İSTANBUL- TURKEY

Applicant (Başvuru Sahibi) : EPA TEKNOLOJİ VE OTOMASYON MAKİNALARI SAN.TİC.LTD.ŞTİ.

TEVFİKBEY MAH.ŞEHİT EROL OLÇOK CAD. NO.16 34295 SEFAKÖY KÜÇÜKÇEKMECE-İSTANBUL- TURKEY

Product (Ürün) : KESME -ÇEVİRME-İŞARETLEME MAKİNESİ / CUTTING-TURNING-MARKING MACHINE

Trademark (Marka) : EPA AKIN

Type / Model (Tip / Model) : EPA 400-04, EPA 400-05, EPA 400-07, EPA 400-08, EPA 501, EPA 502, EPA 503, EPA 504, EPA 505

Base of Attestation (Onay Dayanağı) : TS EN 60204-1:2018; TS EN ISO 12100



www.ptc.com.tr

ID NO : 2612019

The certificate is issued after testing of the named product(s) and/or audit of the technical documentation and confirms that the tested product complies with the essential protection requirements of the mentioned directives on a voluntary basis.

Sertifika, belirtilen ürünün/ürünlerin test edilmesinden ve/veya teknik dokümantasyonun denetlenmesinden sonra verilir ve test edilen ürünün, belirtilen direktiflerin zorunlu koruma şartlarına gönüllü olarak uygun olduğunu onaylar.

The referred technical file(s) shows that the product complies with standard(s) recognized as giving presumption of compliance with the essential requirements listed EU Directive(s) above, other relevant Directives and standards have to be observed. This attestation does not abrogate the compulsory obligation of the manufacturer to issue the declaration of conformity.

Diğer ilgili standartlara ve direktiflere uyulmalıdır. Bu onay üreticinin uygunluk beyanı düzenleme zorunluluğunu ortadan kaldırmaz. Referans teknik dosya ile ürünün yukarıda belirtilen AT Direktiflerinin temel gereklerine uygunluğu kabul edilir.

Date / Tarih : 27/09/2025

Date of Issue / Basım Tarihi : 27/09/2025

Expiry to / -e Kadar Geçerli : 27/09/2026

PTC Ürün Test ve Belgelendirme San. Tic. Ltd. Şti



PTC

**Ürün Test ve Belgelendirme
San. Tic. Ltd. Şti**

Örnek Mah. Udi Hasanbey Sok. No: 31
Reis Plaza Ataşehir / İSTANBUL

Tel: +0(216) 393 32 32

info@ptctesting.com – www.ptctesting.com



TURKISH ACCREDITATION AGENCY

ACCREDITATION CERTIFICATE

As a Testing Laboratory

PTC ÜRÜN TEST VE BELGELENDİRME SANAYİ TİCARET LİMİTED ŞİRKETİ

Central Address: ÖRNEK MAH. UDİ HASANBEY SK. REİS PLAZA NO:31 A ATAŞEHİR İstanbul / Türkiye

is accredited in accordance with TS EN ISO/IEC 17025:2017 standard within the scope given in Annex following the assessment conducted by TURKAK.

Accreditation Number : AB-1374-T

Accreditation Date : 21.09.2018

Revision Date / Number : 07.04.2023 / 06

This certificate shall remain in force until **19.09.2026**, subject to continuing compliance with the standard **TS EN ISO/IEC 17025:2017**, related regulations and requirements.

Gülden Banu Müderrisoğlu
Secretary General



Turkish Accreditation Agency (TURKAK) is a signatory to the European co-operation for Accreditation (EA) Multilateral Agreement (MLA) and International Laboratory Accreditation Cooperation (ILAC) Mutual Recognition Agreement (MRA) in the scope of ISO/IEC 17025.

This document has been signed by Gülden Banu Müderrisoğlu on {t} with a secure electronic signature in accordance with the electronic signature law numbered 5070. Use the QR code to verify the e-signed document.



CERTIFICATE OF REGISTRATION

EPA TEKNOLOJİ VE OTOMASYON MAKİNALARI SAN. TİC. LTD. ŞTİ.

TEVFIKBEY MAH. ŞEHİT EROL ÖLÇÜK CD. EPA APT. NO:14/1 KÜÇÜKÇEKMECE/İSTANBUL

Sertifika Numarası / Certificate No: QA/TR/9001/1677

Yukarıda adı geçen kuruluş, aşağıda belirtilen kapsamda bir yönetim sistemi yürürlüğe koymuş ve uygulamakta olup ilgili standarda uygunluğu ALBERK QA TEKNİK tarafından onaylanmıştır.
The above-mentioned organization has put into effect a management system within the scope specified below and its compliance with the relevant standard has been approved by ALBERK QA TECHNIC.

ISO 9001:2015

(KALİTE YÖNETİM SİSTEMLERİ)
(QUALITY MANAGEMENT SYSTEMS)

KONFEKSİYON VE TEKSTİL MAKİNALARI İMALATI, SATIŞI VE SERVİSİ
CLOTHING AND TEXTILE MACHINERY MANUFACTURING, SALES AND SERVICE

IAF KODU / IAF CODE: 18

Bu belge, firma ISO 9001:2015 standardının gerektirdiklerini yerine getirdiği ve ALBERK QA TEKNİK'e ilgili sorumluluklarını taşıdığı süreçte geçerlidir.
This certificate is valid as long as the company fulfills the requirements of the ISO 9001:2015 standard and bears the responsibility towards ALBERK QA TECHNIC.

Sertifika Düzenleme Tarihi
Certificate Issue Date
Sertifika İlk Yayın Tarihi
Certification First Issue Date

: 03.10.2024
: 03.10.2024
: 03.10.2024
: 03.10.2024

Sertifika Geçerlilik Tarihi
Certificate Validity Date
Sertifika Yenileme Periyodu / Ödül Tarihi
Certification cycle / Renewal Date

: 02.10.2026
: 02.10.2025
: 3 Yıl / 02.10.2027
: 3 Years 02.10.2027

Sertifika Revizyon Numarası ve Tarihi : 00/03.10.2024
Certificate Revision Number and Date : 00/03.10.2024

Genel Müdür
Latif Murat YILMAZ

ALBERK QA ULUSLARARASI TEKNİK
KONTROL VE BELGELENDİRME A.Ş.
Küçükbakkalköy Mahallesi Kayışdağı
Caddesi No: 13 İç Kapı No: 1
Ataşehir İstanbul / TÜRKİYE
Tel : 0216 572 49 10-11-12
Fax : 0216 572 49 14
www.qatechnic.com

FR-200-2, Rev.01, 01.05.2024




CONTENTS

LABEL INFORMATIONS	5
01-MACHINE CONTROLS	6
02-GENERAL FEATURES	7
A-CHARACTERISTICS AND APPLICATION AREAS	7
03-SECURITY MEASURES	8
A-TRAINING	8
B-CONDITIONS THAT YOU NEED TO TAKE SECURITY MEASURES	8
04-EPA 503 TECHNICAL INFORMATIONS.....	9
05-LIFTING AND TRANSPORT	10
06-LOADING AND UNLOADING	10
07-INSTALLATION AND SET UP	11
08-PNEUMATIC CONNECTIONS	12
09-ADJUSTING THE MACHINE	13
10-MAINTENANCE	14
11-SPARE PART CHARTS	14

LABEL INFORMATION

Machine name	Three points marking machine
Type	EPA 503
Serial Number	
Production Date	
Voltage	
Power	
Weight	45 Kg
Operating Pressure	4-6 Bar

 01-MACHINE CONTROLS

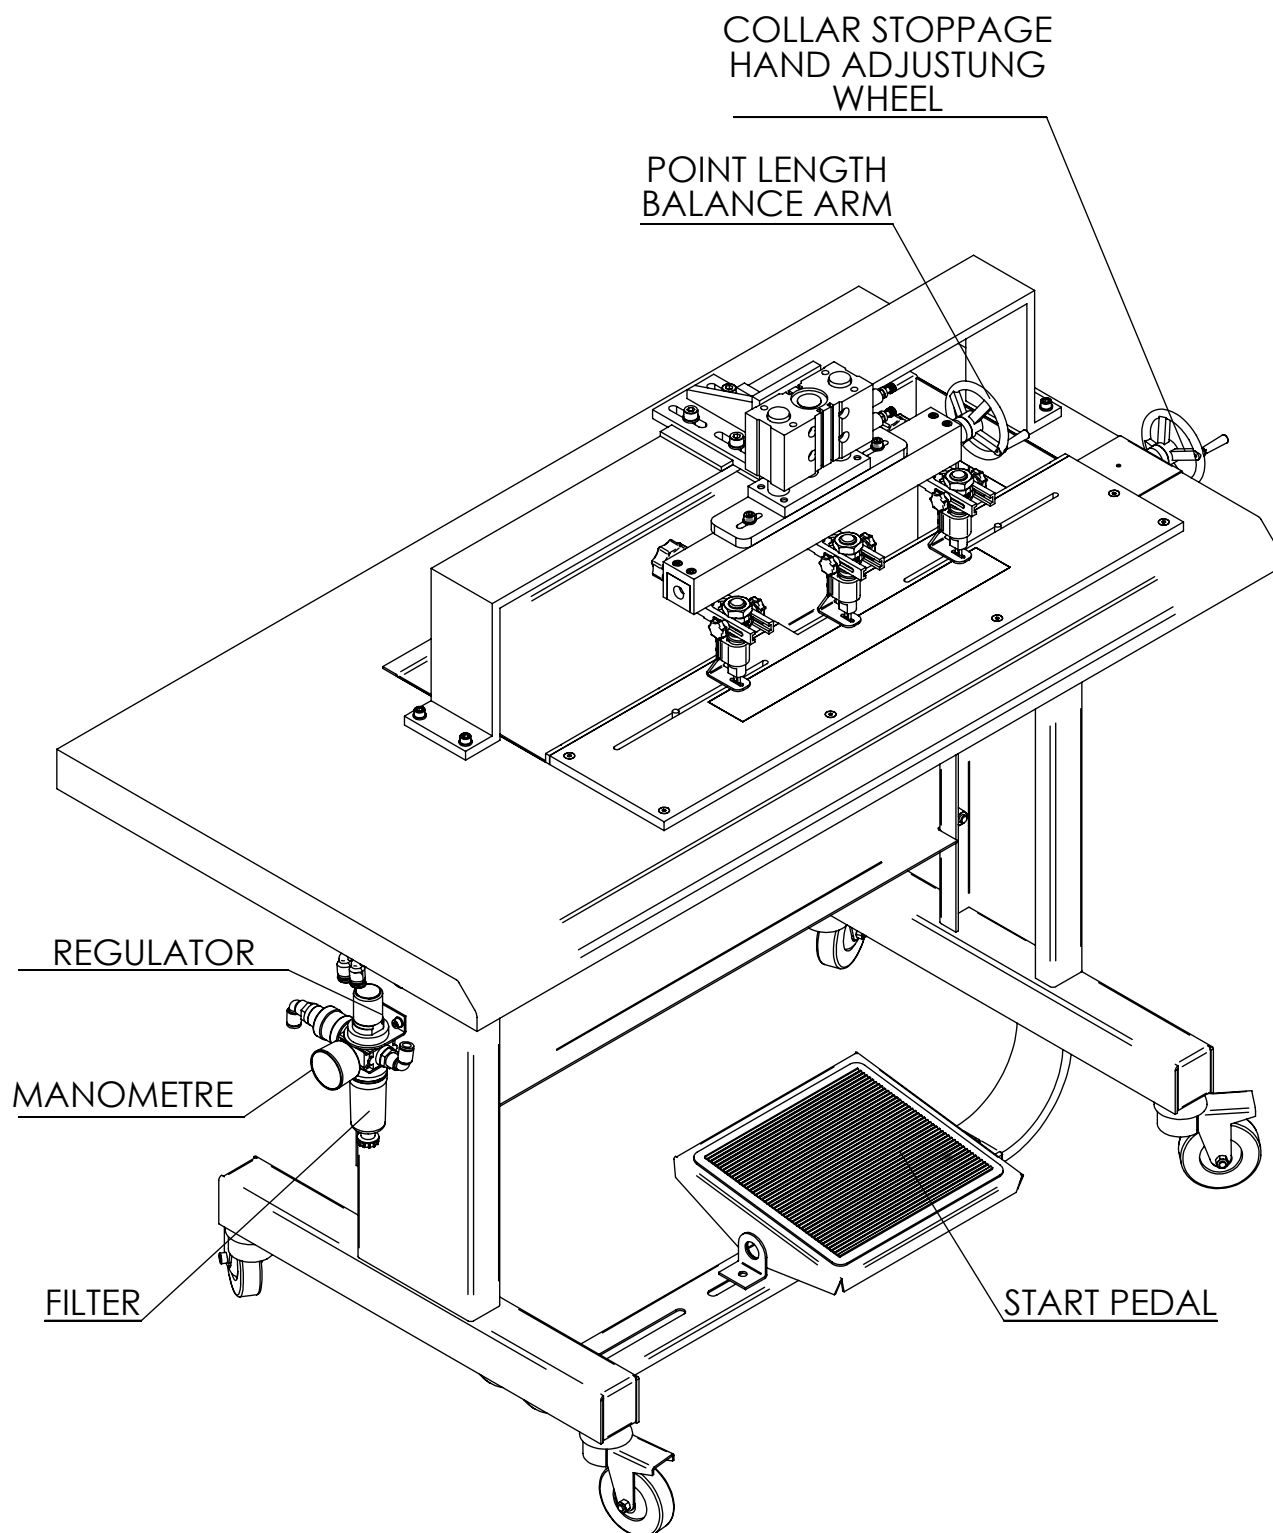

02-GENERAL CHARACTERISTICS

A-CHARACTERISTICS AND APPLICATION AREAS

EPA 503 three points marking machine is only used at marking cloths like shirt, blouse. In case of a false use other than stated at this handbook, happened to people or goods from accident and damages, producing company can not be held responsible.

It is designed for fast and easy use for the users.

It has an adjustable distance mark system.

It accelerates to the production by marking of the three points on the collar.

It provides standard production.

The machine is equipped all measures for user safety.

There is a option of collar collection apparatus.

ATTENTION:

Before starting machine maintenance, part changing or adjustment please disconnect the machine from basic power supply source. And wait cooling parts of the machine. Do not make any operation unless you are sure of the electricity connection.

Do not use your machine under heavy dust environmental conditions.

The machinery is never exposed to open air conditions like rain, snow etc.

03-SECURITY MEASURE



At place it has seen next figure, that means to endanger for health of user. Therefore while it is walked up, it is necessary more to be careful.

Before using the machine, please read manual instructions and other explanatory which is the part of machine accesories. Keep manual and explanatory documents as easy reference guide well.

To avoid death or injury, do not use your machine without instructions on your manual.

EPA company does not admit any responbility about accident or injuries comes out due to the machine have been used out of purpose of usage.

To avoid accidents cause to death and injuries, do not modify the machine.

EPA company does not accept any responsibilities about accident comes out due to the machine modifications.

A-TRAINING

Operators should be sufficented regarding machine use. In order that conditions they need a training plan and train them prior.

B-CONDITIONS THAT YOU NEED TO TAKE SECURITY MEASURES

After lifting the machine while you were replacing, it is necessary to consider weight of machine. For weight of machine, look over chapter "LABEL INFORMATIONS".

Before lifting or replacing the machine, in order to avoid injuries or led to death accidents, take essential security measures against drop or roll.

Definitely do not put your hand to the machine which is in operation.

While changing any parts of the machine, absolutely use orginal EPA parts. EPA is not responsible occurs from accidents in case of using unorginal parts under no circumstance.

Absolutely clean the machine regularly.

After maintanance if the machine still do not work properly, to avoid accidents cause to death or injury consult to EPA technical service urgently.

04-EPA 503 TECHNICAL INFORMATION

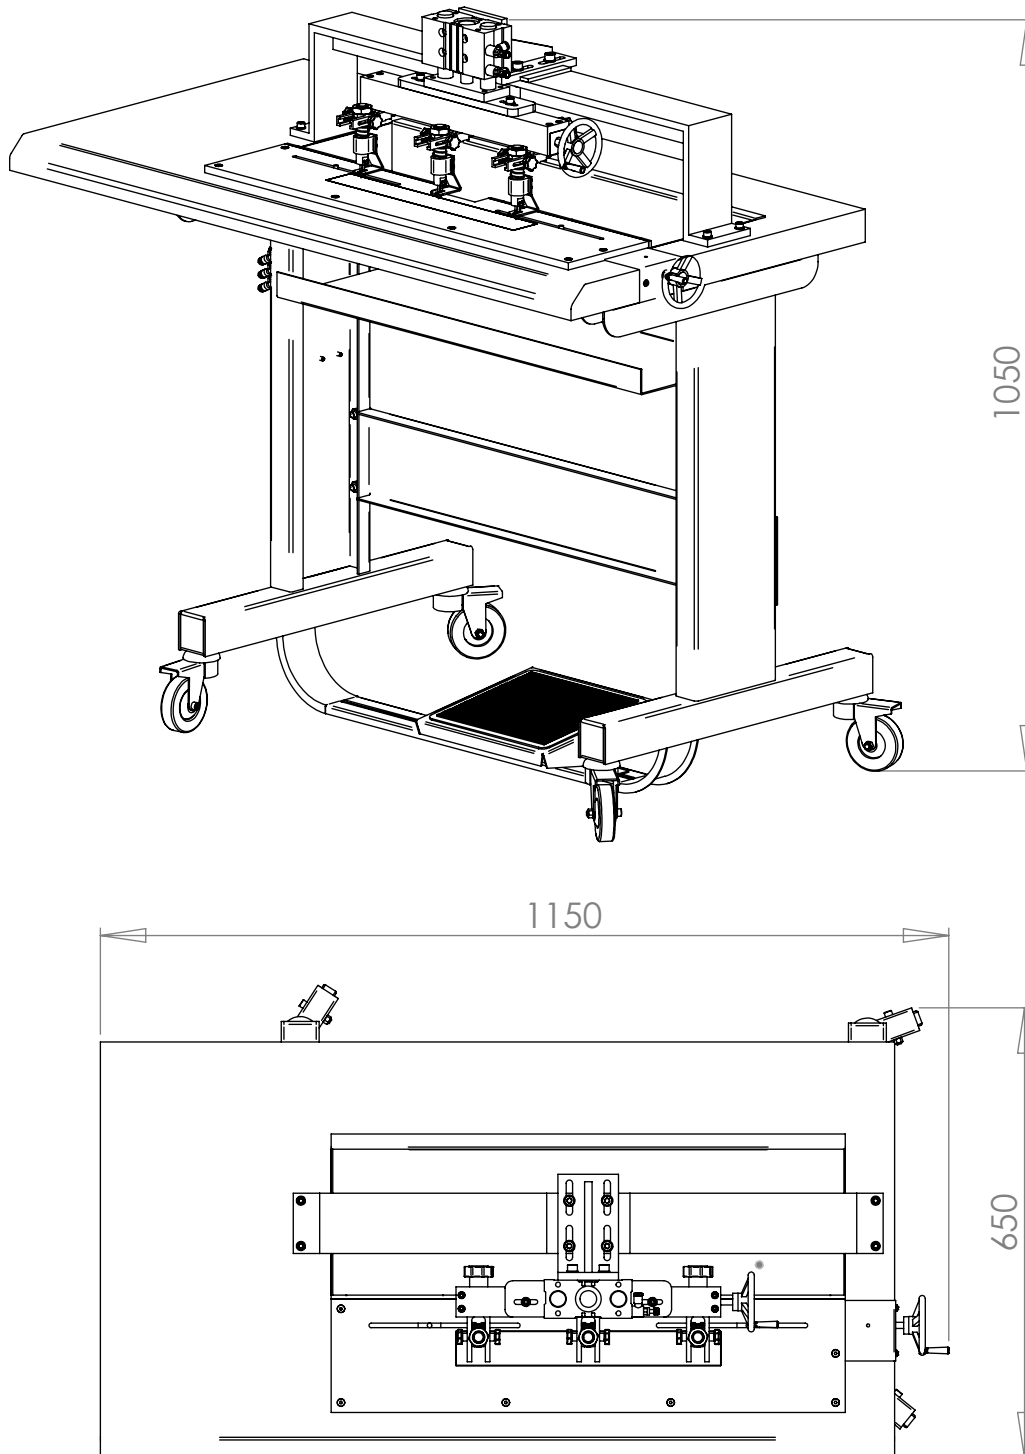 


Figure.1

Machine runs electropneumatic system.

 
Serial adjusting capacity.

Dimension :650x1150x1050 mm

Capacity: 250 Pcs/Hr


05-LIFTING AND TRANSPORT

EPA 503 is conveyable with packaged or not. In either case, ensure forks of fork- lift truck adjusted as to exact weight of the machine. While machine is moved with fork-lift truck, front face of machine turned to fork-lift truck pass forks under the machine. Place van or pick-up truck and bond belt or ropes.

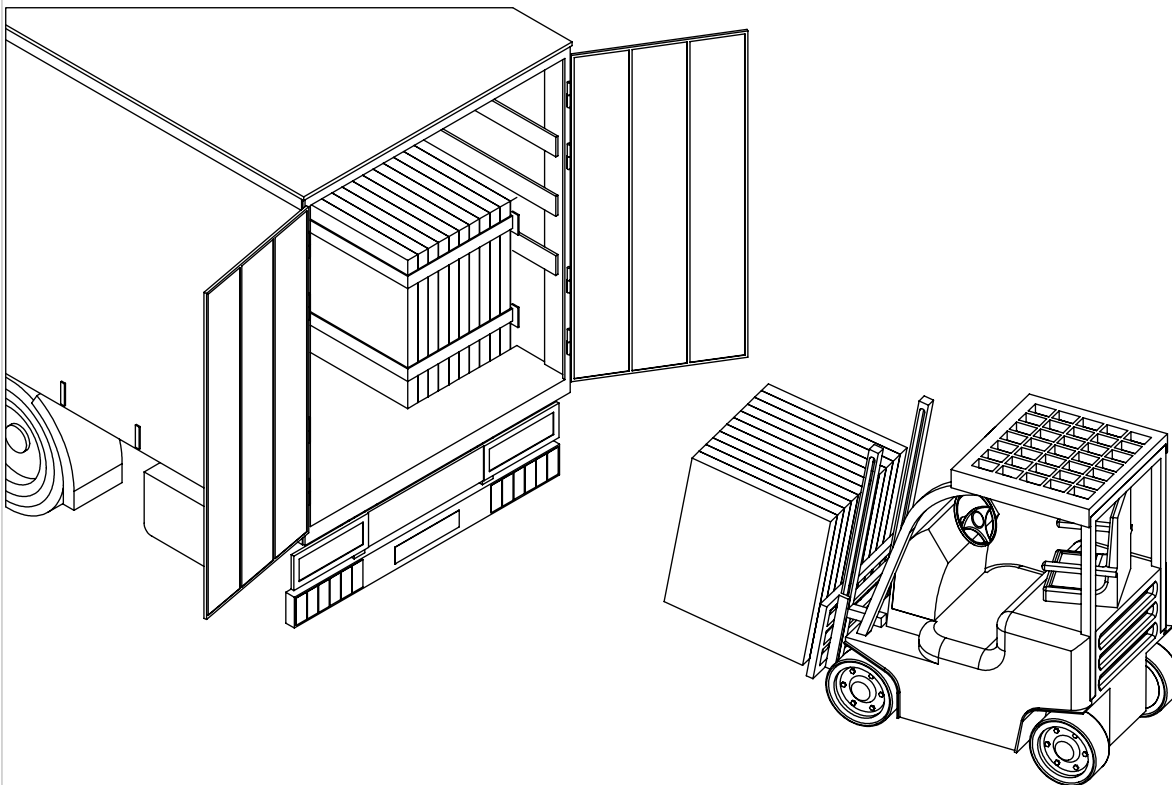

06-LOADING AND UNLOADING

 Ensure forks of fork- lift truck adjusted as to exact weight of the machine. Take out the package and lift front face of machine turned to fork-lift truck is passing forks under the machine. After placing it on a hard and plain surface not subject to any weather condition and then move it.

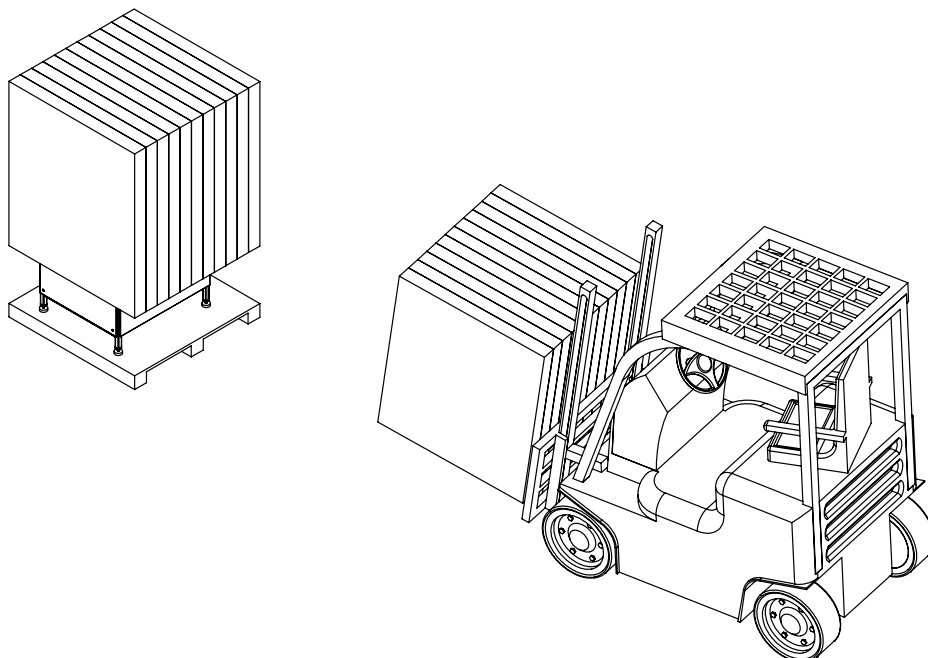

07-INSTALLATION AND SET UP

ATTENTION: This machine have to set up by experts.

Producer company can not be held responsible to problem and faults that it is resulted from inadequate links in case of not working the machine in respect of wrong set up and main power sources not parallel to informatics provided here.



If the machine will be set up over a stationary surface, please control whether surface can be removed weight of the machine. If there is burnable/ explosive/ sparkler around the machine, definitely do not set up here.

Control the machine for working and maintenance needed blank during machine setup so as to provided. Machine has to be replaced over stiff and plain surface.

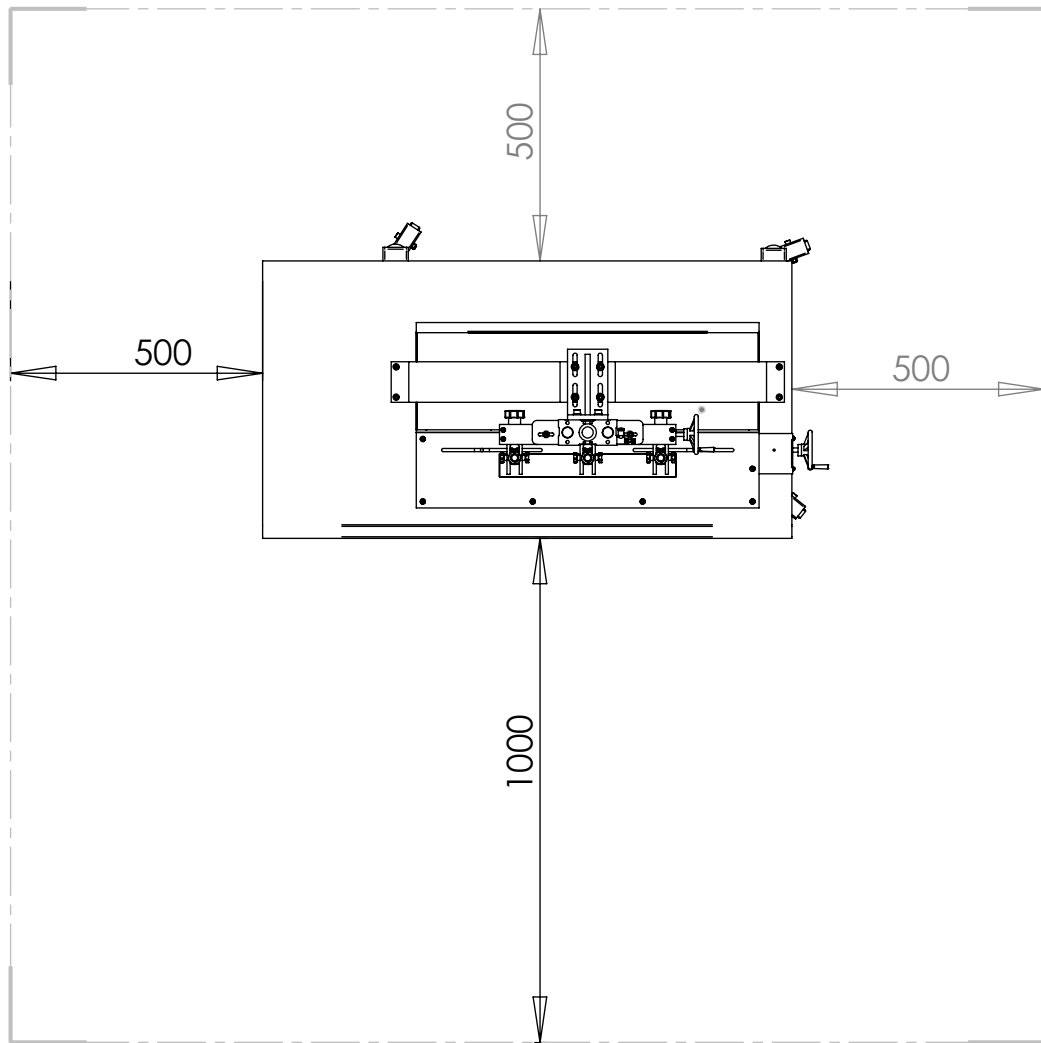 


Figure.2

08-PNEUMATIC CONNECTIONS

Connect the machine to compressed air output. (Figure.3-A)

Bring pressure at the manometre (Figure.3-C) between 4-6 Atm by doing over the pressure controller. (Figure.3-B)

Discharge water in the filter unit from below stopper (Figure.3-D) by controlling permanently.

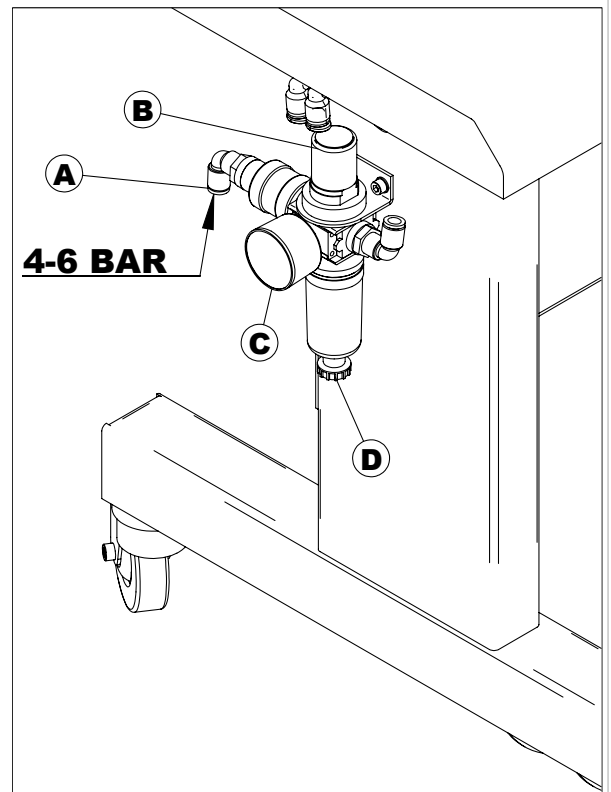 


Figure.3

09-ADJUSTING THE MACHINE

It is done all of settings of the EPA 503 machine in our factory during shipment of the machine. The only thing you have to do that connection of the mould and adjustments of pressing.

For standard placing of the collar make sure that stoppage mills touch to the collars two point (Figure.4-B) you can do it by turning hand wheel (Figure.4-A) to the right and left. For adjusting collar's marking distance you can turn hand wheel to the left and right and take needle tips to the desired space you are able make pointing operation.

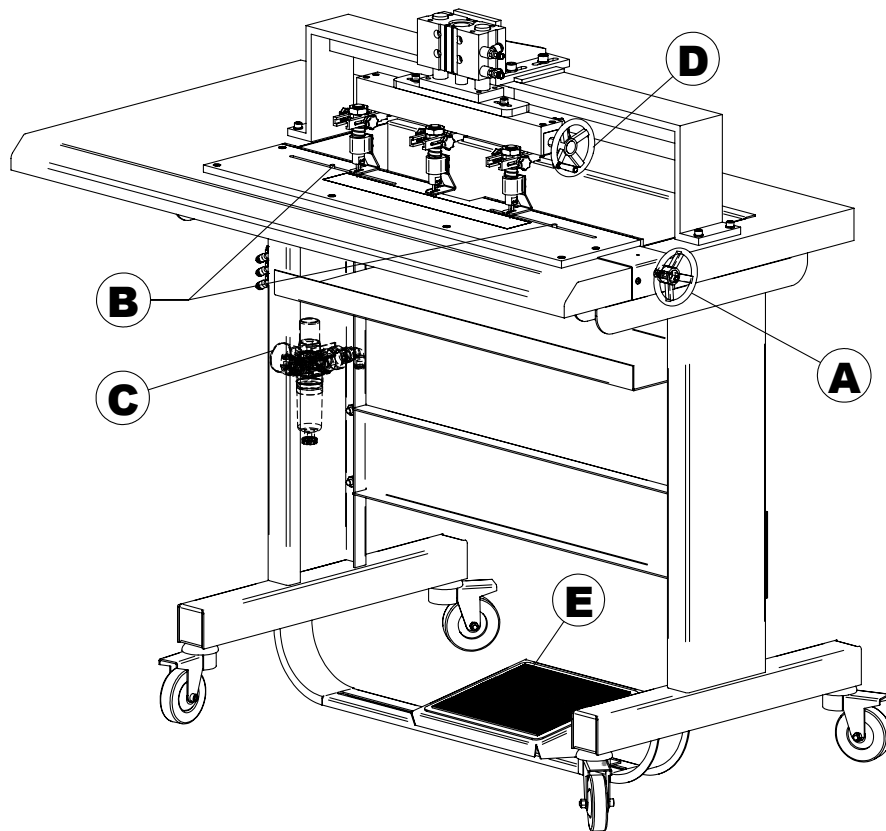 


Figure.4

The operation of mould changing is so simple. It has an ergonomical characteristics so workers do not need to spend too much effort.

Provide 4-6 bar air to the machine.

Make machine adjustments according to collar which you are going to pointing.

Open air clack and be sure that pressure adjuster on the 4-6 Atm.

If it is needed adjust the air pressure by using regulataor.

Place the collar to the machine perfectly.

You can start machine by pressing the pedal.

10-MAINTENANCE

Before starting works as maintenance, part changing, adjustment disconnect the machine main power source. This processes should be done by trained people.

11-SPARE PART CHARTS

 
Please inform us about following infos, we can provide your spare part promptly:

Machine model and serial no


Spare part code

Check your code on your spare part chart.


Example : **Three points marking machine** Model **EPA 503** Serial no Code
'part

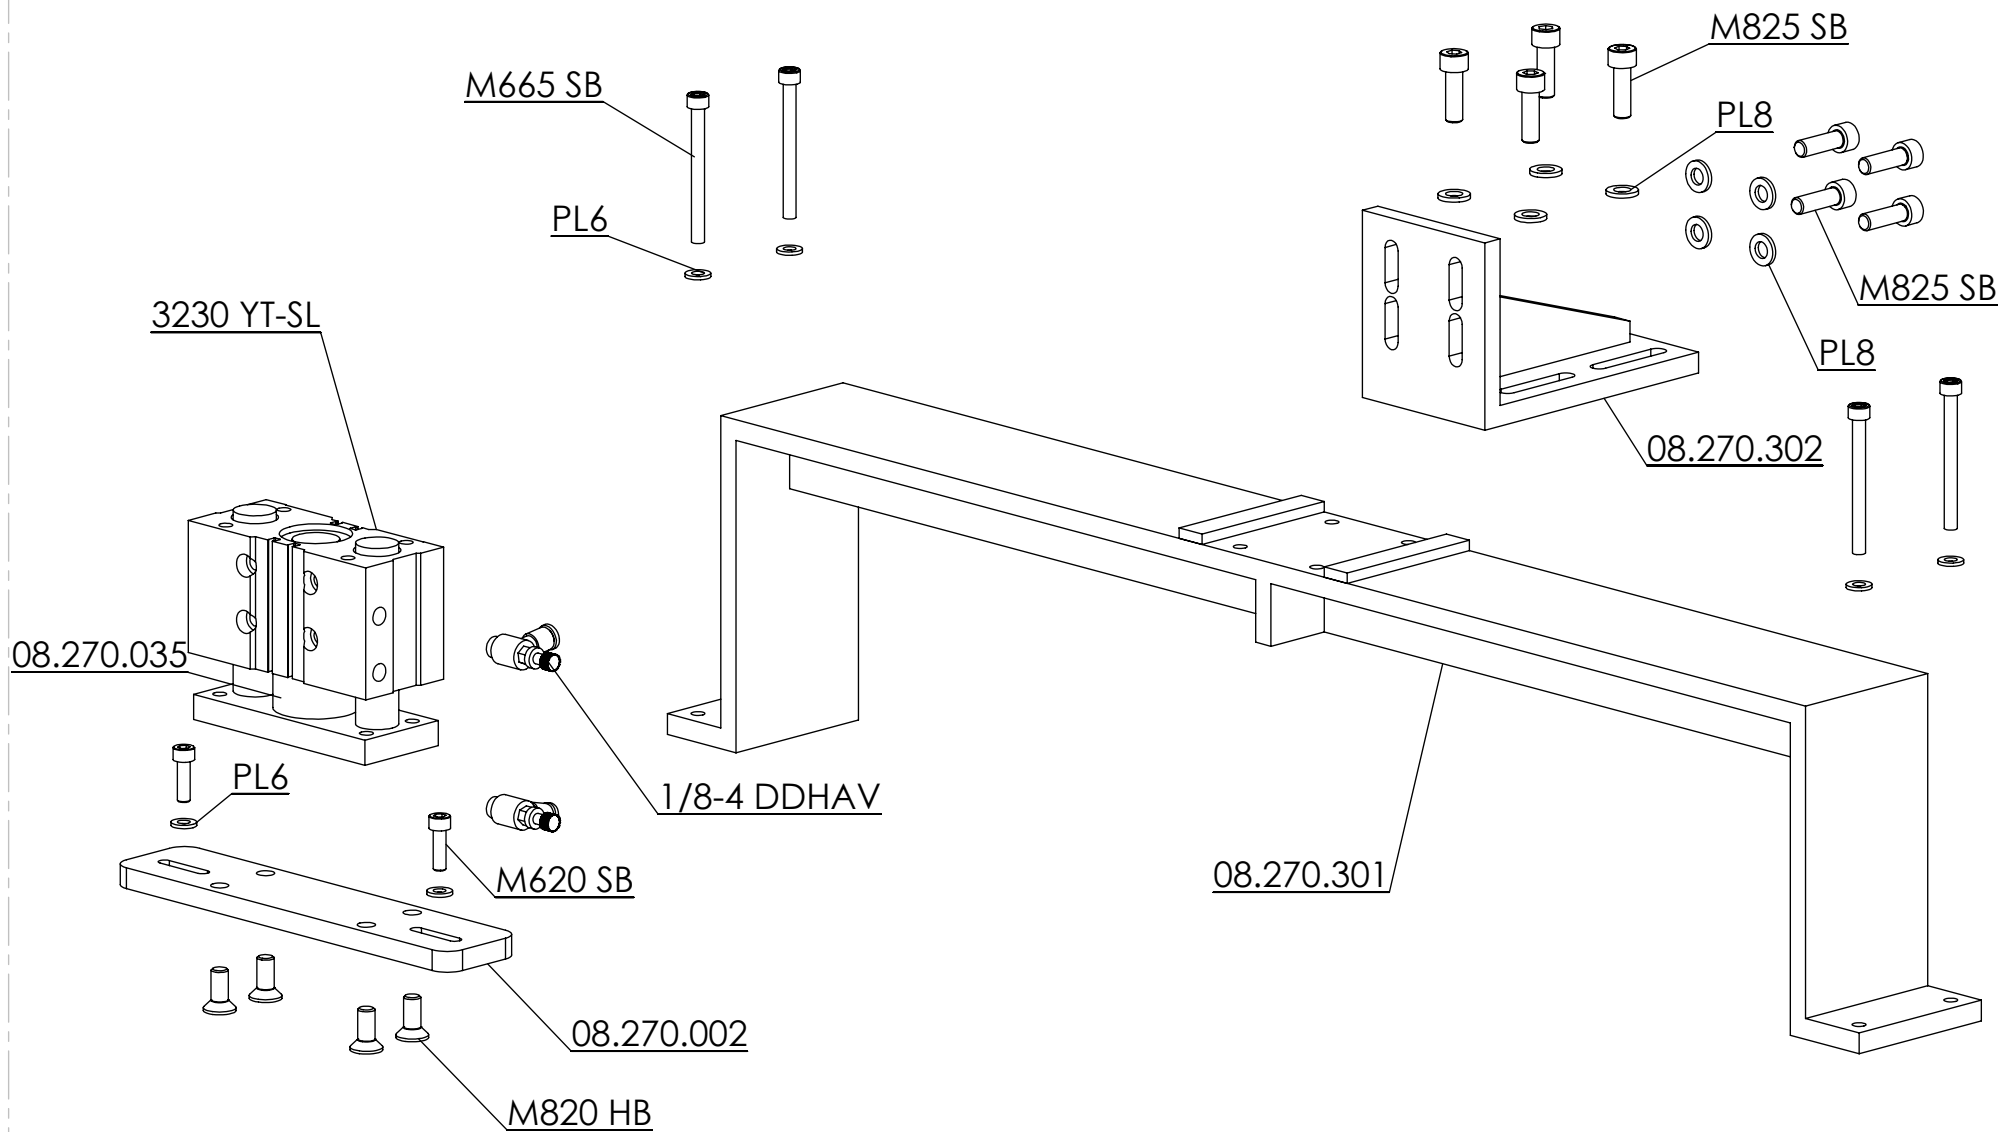

MODEL : EPA 503
CHART 1

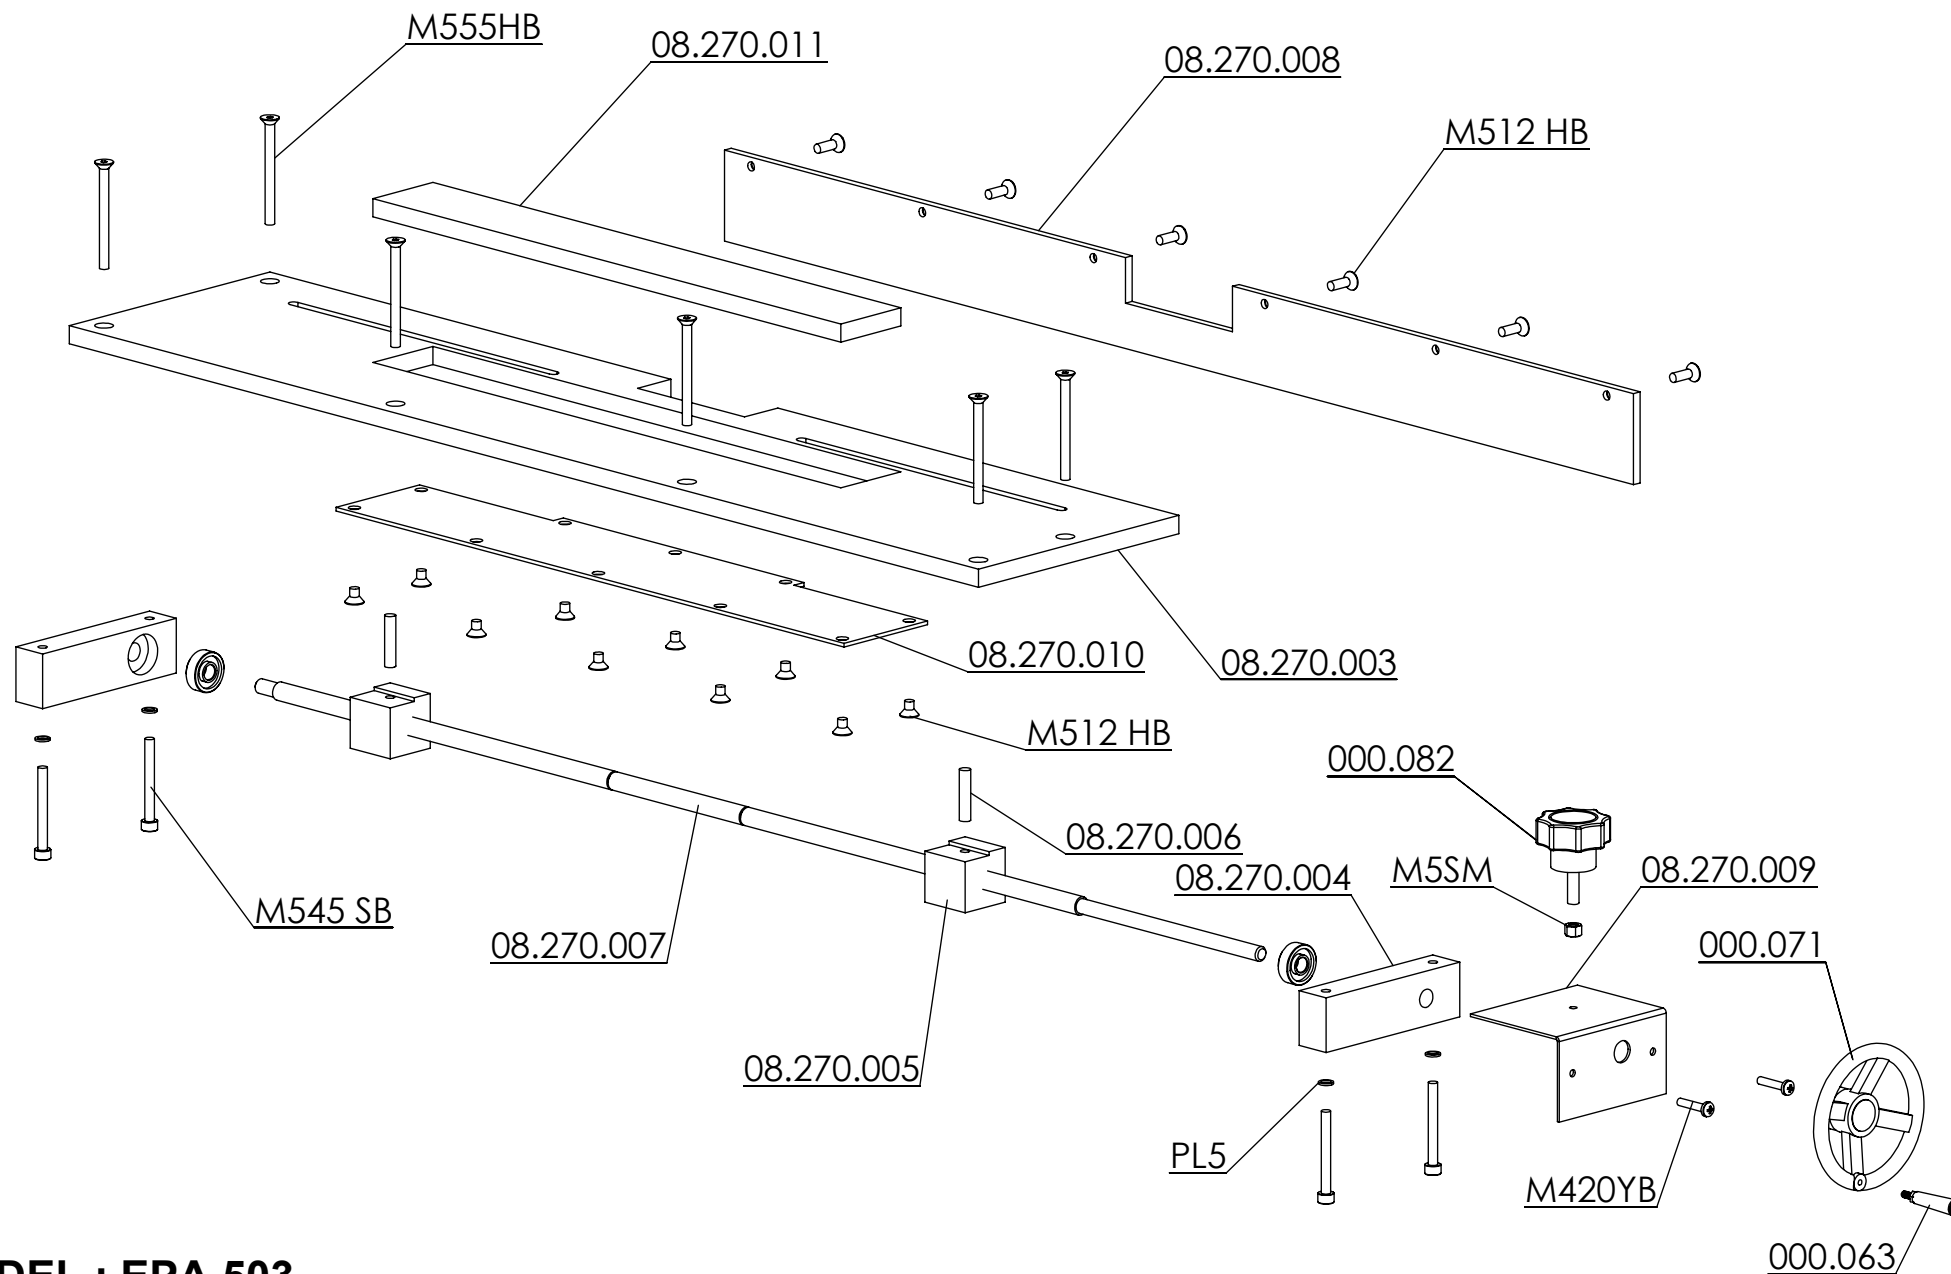 

MODEL : EPA 503
CHART 2

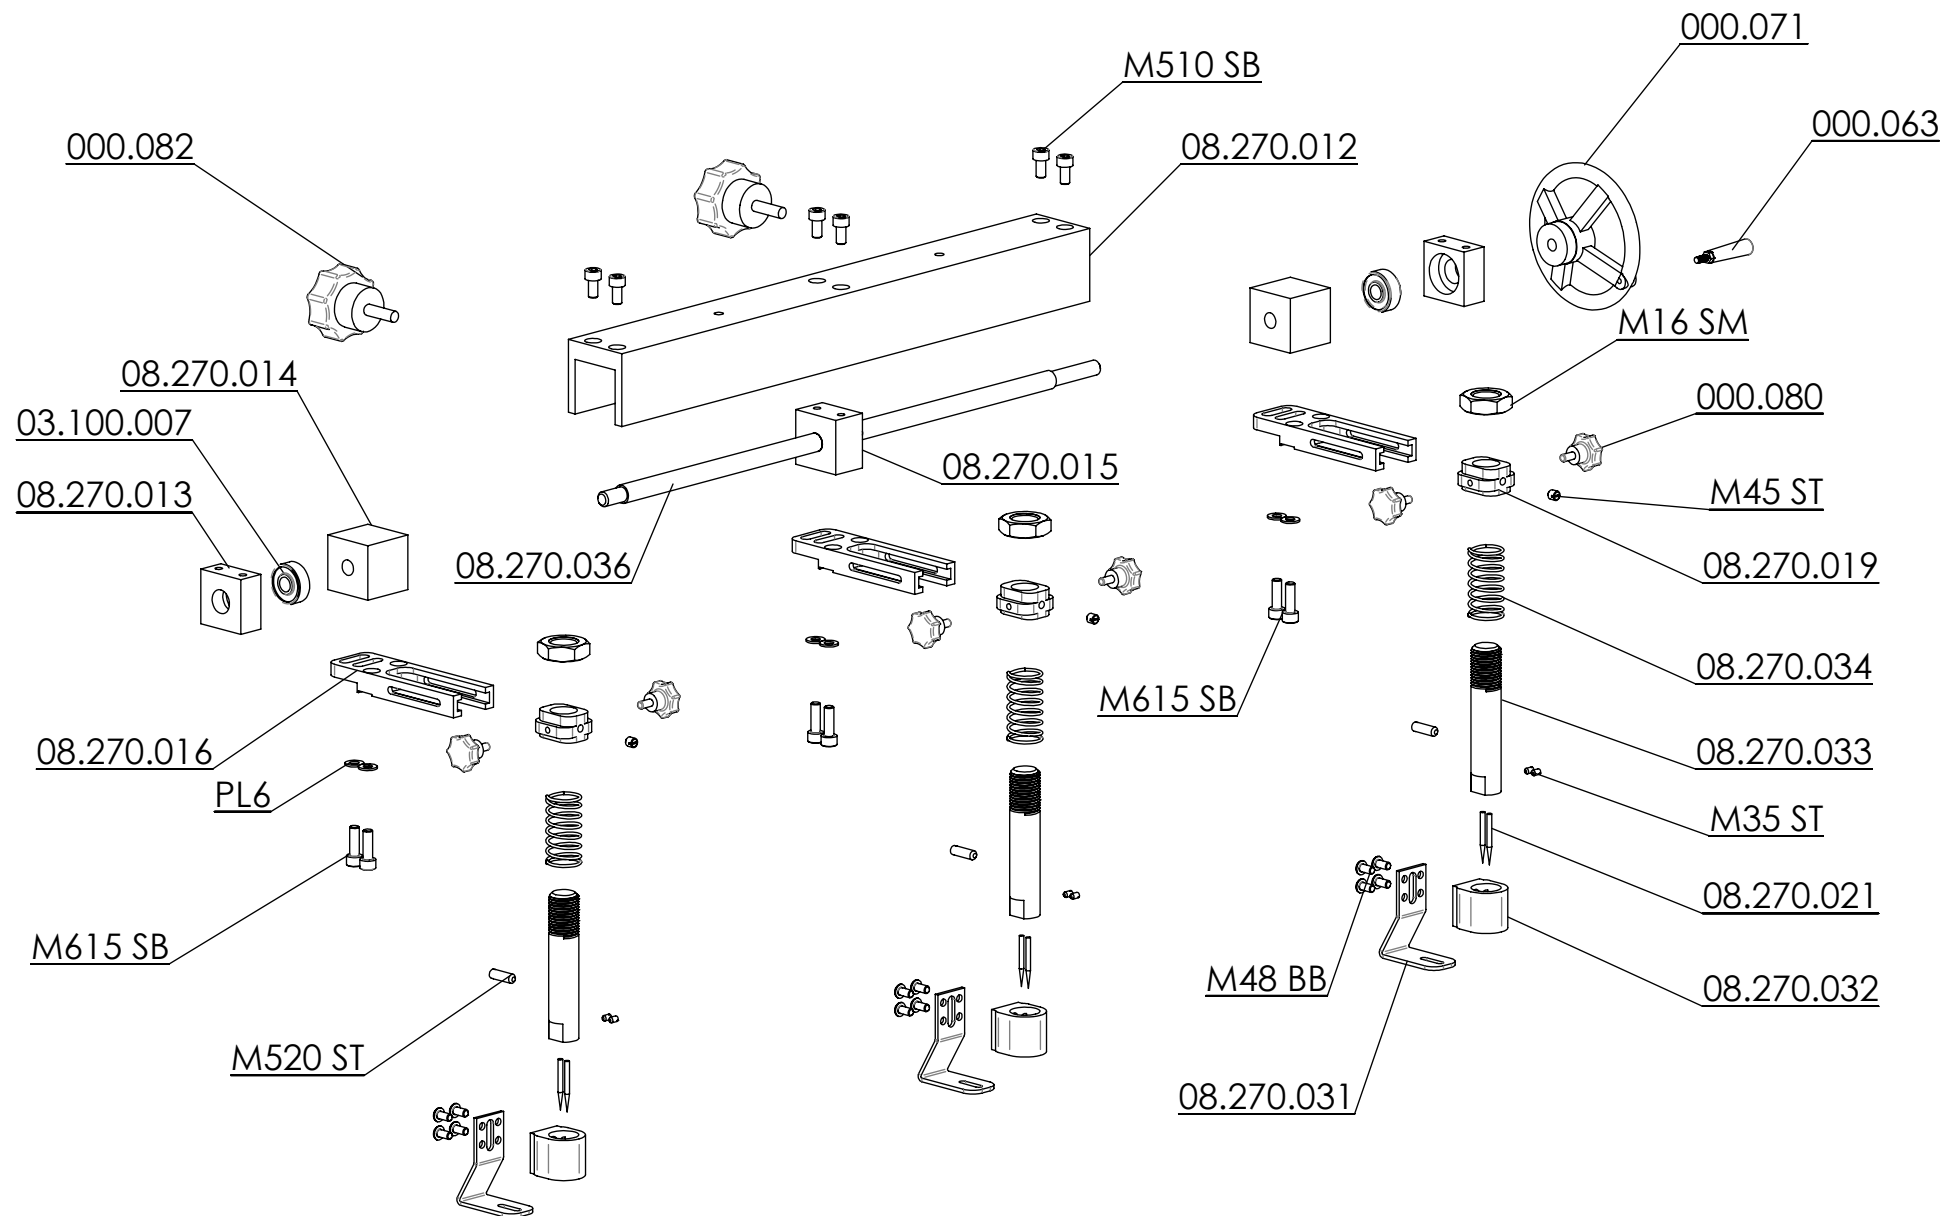 

MODEL : EPA 503
CHART 3